



# HOW TO USE YOUR **DOOR DECKERS**



**STEP #1**

ATTACH A DOOR DECKER BRACKET TO THE APPROXIMATE CENTER OF EACH END OF A DOOR USING THE ENCLOSED OR SIMILAR SCREWS. MAKE SURE THE DOOR DECKERS ARE INSTALLED IN THE SAME DIRECTION. (HOLLOW METAL DOORS REQUIRE SELF TAPPING SCREWS WHICH ARE NOT INCLUDED WITH YOUR PURCHASE.)



**STEP #2**

LAY THE DOORS ON SAW-HORSES. SPRAY THE SIDE OF DOOR THAT IS FACING UPWARD & THE EDGE OF THE DOOR THAT IS CLOSEST.




**STEP #3**

TURN THE DOOR OVER AND SPRAY THE OPPOSITE SIDE & EDGES.



**STEP #4**

AFTER SPRAYING BOTH SIDES, STACK TO DRY. HOLLOW-CORE DOORS CAN BE STACKED UP TO 8-10 DOORS HIGH AND SOLID-CORE DOORS SHOULD ONLY STACKED 3-4 DOORS HIGH.

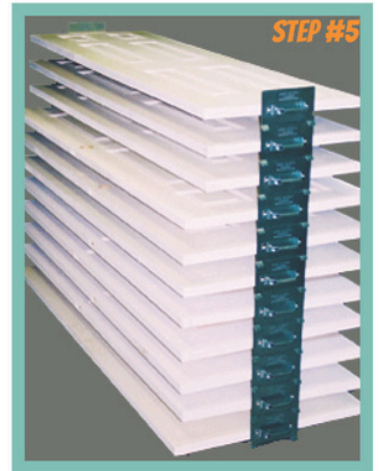

**STEP #5**

STACK AND STORE OUT OF THE WAY FOR DRYING.

**TIPS**

- \* WHEN STACKING, HOLLOW-CORE DOORS CAN BE STACKED UP EIGHT TO TEN DOORS HIGH. HOWEVER WE RECOMMEND SOLID-CORE DOORS ONLY BE STACKED NO MORE THAN THREE TO FOUR DOORS HIGH.
- \* FOR LONG OR HEAVY DOORS, THREE DOOR DECKER BRACKETS CAN BE USED IN A TRIPOD ARRANGEMENT. FOUR DOOR DECKER BRACKETS CAN ALSO BE USED IN THIS SITUATION (ONE ON EACH CORNER) TO FACILITATE EASIER HANDLING.
- \* TO HELP PREVENT BRIDGING WHEN USING LATEX PAINT, A WASHER CAN BE USED AS A SPACER BETWEEN THE DOOR END AND THE DOOR DECKER BRACKET. IF A BRIDGE FORMS IT MAY BE NECESSARY TO SCORE ALONG THE DOOR DECKER TO PREVENT TEARING UPON REMOVAL.
- \* TO PREVENT A CHANCE OF WARPING DO NOT LEAVE THE DOORS STACKED FOR AN OVERLY EXTENDED PERIOD. WE RECOMMEND MONITORING THE DRYING PROCESS AND FLIPPING THE ENTIRE STACK OVER IF WARPING BEGINS. YOU CAN ALSO UTILIZE THE **ON-EDGE RUBBER FEET** INCLUDED WITH THIS PURCHASE. SEE INCLUDED INSTUCTIONS.



INCLUDED WITH PURCHASE:  
8 X 1 1/4 INCH PHILLIPS  
WAFFER HEAD SCREWS



WHEN USING THIS PRODUCT, WEAR EYE PROTECTION & HANDLE WITH CARE. TOOLS MAY HAVE SHARP EDGES. USE DISCRETION WHEN STACKING DOORS TO AVOID COLLAPSE OR BACK INJURY. IMPROPER USE OF THIS PRODUCT CAN RESULT IN DAMAGE OR INJURY.

FOR TIPS AND ADDITIONAL PRODUCTS VISIT [SPEEDPAINTINGTOOLS.COM](http://SPEEDPAINTINGTOOLS.COM)  
11641 INDIAN HILL ROAD, AMARILLO, TX. 79124  
PH: 806-236-1022 EMAIL: [INFO@SPEEDPAINTING.COM](mailto:INFO@SPEEDPAINTING.COM)






## ***RUBBER FEET ON-EDGE DRYING SYSTEM INSTRUCTIONS***

***THIS WILL HELP PREVENT POSSIBLE BOWING AND WARPING OF DOORS DURING LONG-TERM DRYING AND STORAGE.***




### ***STEP #1***

***AFTER THE FINAL COAT OF FINISH IS TOUCH-DRY ON THE STACK OF DOORS, INSTALL A RUBBER GROMMET WITH INCLUDED SCREW IN THE HINGE FIELDS OF EACH DOOR.***

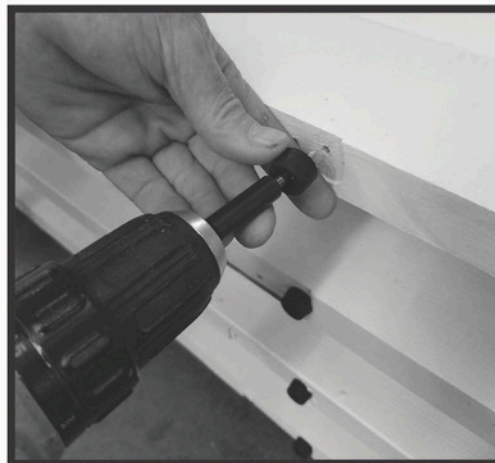

### ***STEP #2***

***ONCE RUBBER GROMMETS ARE ATTACHED TO EACH DOOR, LEAN THE DOORS ONE BY ONE VERTICALLY AGAINST THE WALL HINGE SIDE DOWN. THE DOOR DECKER BRACKETS SHOULD INTERLOCK SECURELY BETWEEN DOORS AND THE DOORS WILL BE SITTING SLIGHTLY ABOVE THE GROUND ON THE GROMMETS.***

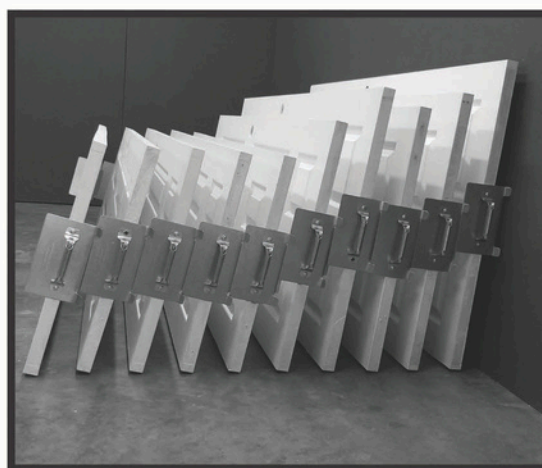

***WHEN USING THIS PRODUCT, WEAR EYE PROTECTION & HANDLE WITH CARE. TOOLS MAY HAVE SHARP EDGES. USE DISCRETION WHEN STACKING DOORS TO AVOID COLLAPSE OR BACK INJURY. IMPROPER USE OF THIS PRODCUT CAN RESULT IN DAMAGE OR INJURY.***