




HOW TO USE YOUR **CABINET DOOR DECKERS**

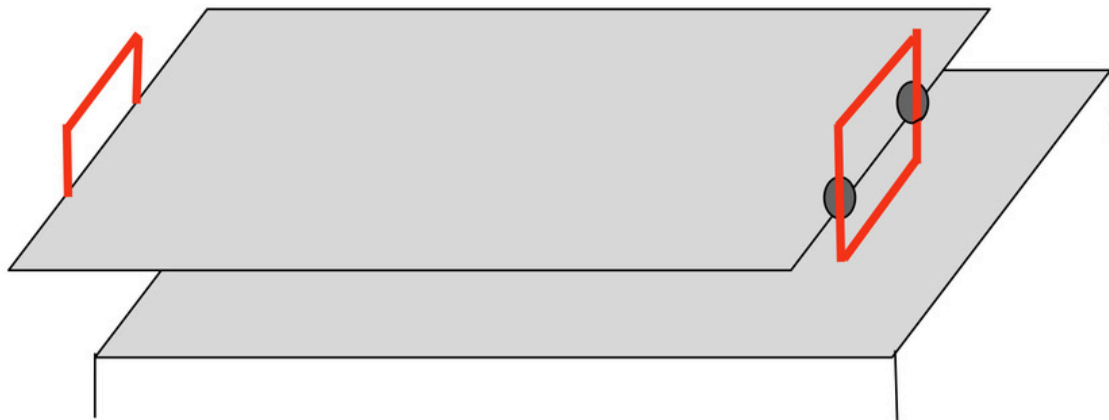


CABINET DOOR DECKERS WORK WELL WITH CABINET DOORS, SHUTTERS, SHELVES AND BI-FOLD DOORS. MATERIALS CAN BE FINISHED WITH A SPRAYER, ROLLER OR BRUSH.

STEP #1 ALIGN THE CABINET DOOR DECKER BRACKETS IN THE APPROXIMATE CENTER OF A CABINET DOOR AS SHOWN. DRILL A PILOT HOLE FOR EACH SCREW USING THE 3/32 BIT INCLUDED. NEXT ATTACH THE CABINET DOOR DECKER WITH THE ENCLOSED SCREWS. REPEAT ON THE OPPOSITE END OF THE CABINET DOOR.

STEP #2 SET THE CABINET DOOR ON A TABLE OR OTHER SOLID SURFACE. SPRAY THE SIDE FACING UPWARD, EDGE AND ENDS. TURN BY GRASPING THE TOP OR BOTTOM OF THE CABINET DOOR DECKER BRACKETS AND FINISH THE OTHER SIDE AND EDGES.

STEP #3 TO STACK, ALIGN THE TOP OF ONE CABINET DOOR DECKER BRACKET WITH THE BOTTOM OF ANOTHER AS SHOWN ABOVE. THE WIDTHS CAN VARY BUT THE LENGTH MUST BE THE SAME IN ORDER TO STACK.

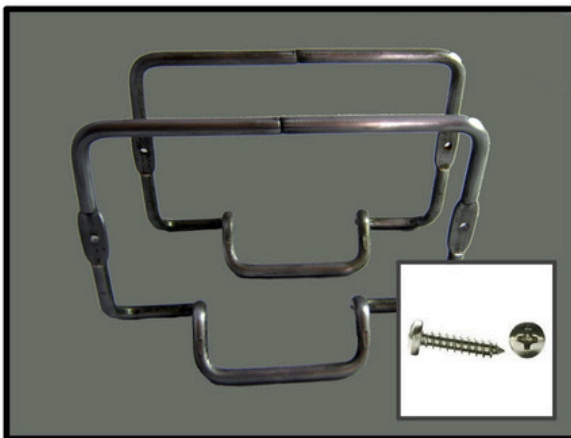

FOR TIPS AND ADDITIONAL PRODUCTS VISIT
SPEEDPAINTINGTOOLS.COM
11641 INDIAN HILL ROAD
AMARILLO, TX. 79124
806-236-1022 INFO@SPEEDPAINTING.COM

**#4-24 X 3/4" PHILLIPS
PAN HEAD TAPPING SCREW**